




Ornamental Capital Installation Instructions for Round Fiberglass Column (8"-12")

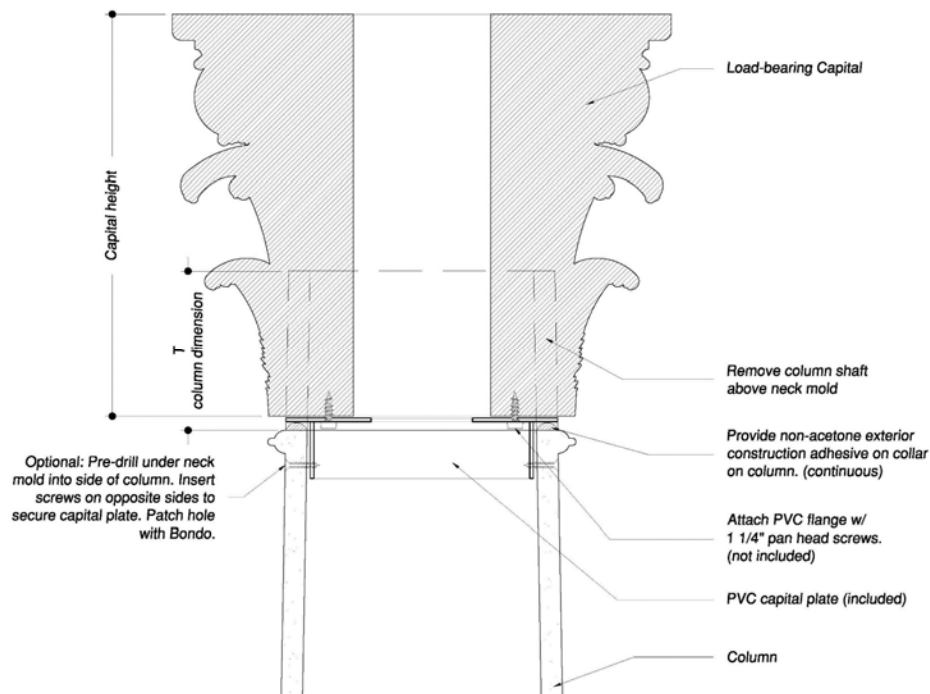

1. Prepare column to receive Poly Ornamental Capital by trimming shaft at top of neck mold.*
2. Attach ABS plastic plug to the bottom of the ornamental capital with screws.
3. Once floor to ceiling height has been established, temporarily place plug on column and, using taper measure, measure from the top of the cap down to the needed height. Cut column off at this point if needed.
4. Place plug and capital on column and attach with screws (predrilling is recommended) and construction adhesive.
5. Position plug and capital as desired and secure to plug with masonry grade screws if desired.
6. To properly secure the base refer to our PermaCast® Column installation instructions.

*For the 8"-12" diameters the standard ornamental capital and ABS plug is designed to transfer the load from the header to the column.