




## Ornamental Capital Installation Instructions for Round Fiberglass Column

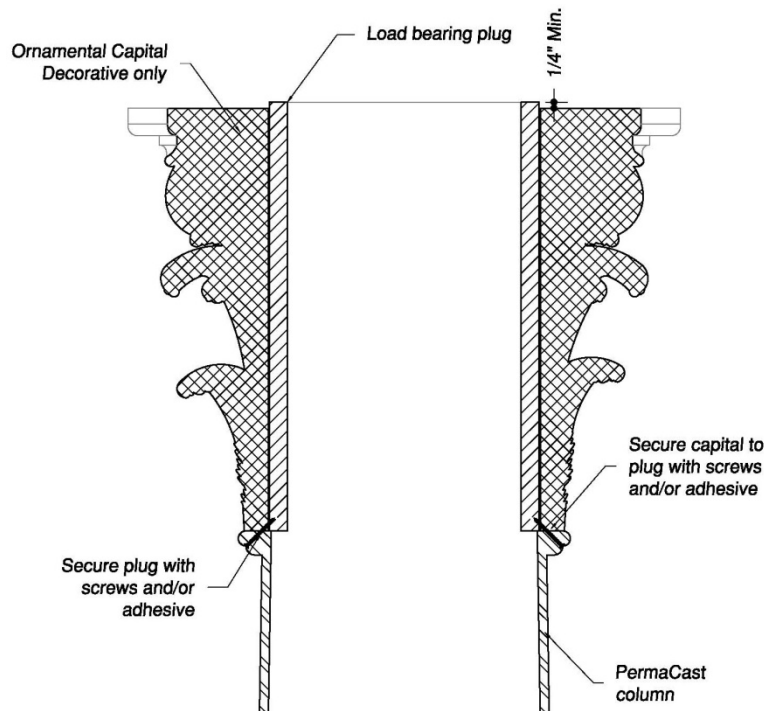

1. Prepare column to receive Poly Ornamental Capital by trimming shaft at top of neck mold.\*
2. Place PermaCast® plug on column and slide capital over plug, resting plug and capital firmly on neck mold. Measure 1/4" above capital and mark plug. Remove capital and plug. Trim plug evenly at mark.
3. Once floor to ceiling height has been established, temporarily place plug on column and, using taper measure, measure from the top of the plug down to the needed height. Cut column off at this point if needed.
4. Place plug on column and attach with screws (predrilled) and construction adhesive, which must be set in to allow capital to slide over plug. For optional fastening method see page 2.
5. Slide capital onto plug and place column into position.
6. Position capital as desired and secure to plug with masonry grade screws.
7. After column is installed there should be approximately a 1/4" gap between the top of the capital and ceiling or beam. This gap can simply be caulked using a paintable caulk.
8. To properly secure the base refer to our PermaCast® Column installation instructions.

\*With Roman Ionic, Greek Ionic, and Scamozzi no plug is needed in most cases. The top of the column is long enough to serve as a plug. Exceptions to this are the 16" and 18" Greek Ionic and all sizes Roman Corinthian and Temple of the Winds for which plugs must be used.



# Ornamental Capital Installation - **Optional** Fastening Method for Round Fiberglass Column



1. As an addition to step 4 of the Ornamental Capital Instructions, strips of wood can be added inside the plug using wide thread pattern screws. This can then be secured to the column by pre-drilling into the side of the column shaft and attaching with wide thread pattern screws.

