

# PermaLite<sup>®</sup> Columns

- Weather Proof
- Insect Proof
- Load Bearing
- Low Maintenance
- Lightweight
- Ready to Prime and Paint
- Limited Lifetime Warranty\*




\*See Warranty

HB&G® PermaLite® columns are cost effective, load bearing, versatile, and require very little maintenance. The PermaLite® columns are available in round and square. PermaLite® columns deliver all of the beauty at 1/3 of the weight.



**TOP VIEW  
CUT-AWAY**

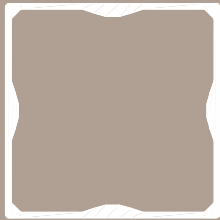

PermaLite® Plain



PermaLite® Recessed



PermaLite® Round

PermaLite®  
Round  
No-Taper

PermaLite®  
Square Plain

PermaLite®  
Square Recessed  
(with panel kit)

PermaLite® Square  
Recessed (with panel  
divider kit)

PermaLite® Square  
Recessed (with 2-panel  
divider kits)



Square Tuscan Cap



Round Tuscan Cap



Square Tuscan Base



Round Tuscan Base

**For Tuscan  
Cap and Base  
dimensions  
refer to  
page 23.**




**PERMALITE® PANEL DIVIDER KITS TO CONVERT A SINGLE PANEL COLUMN INTO A 2 OR 3-PANEL COLUMN**

**RECESSED** – Includes four top panel insert pieces and four bottom panel insert pieces.


**PANEL DIVIDER KITS** are available.

Kit Size	Width	Height
8" Panel Divider Kit (4 Pieces)	4 <sup>7</sup> / <sub>8</sub> "	2 <sup>1</sup> / <sub>4</sub> "
10" Panel Divider Kit (4 Pieces)	5 <sup>5</sup> / <sub>16</sub> "	5 <sup>1</sup> / <sub>8</sub> "

1 panel kit to achieve 2-panel column.  
2 panel kits to achieve 3-panel column.

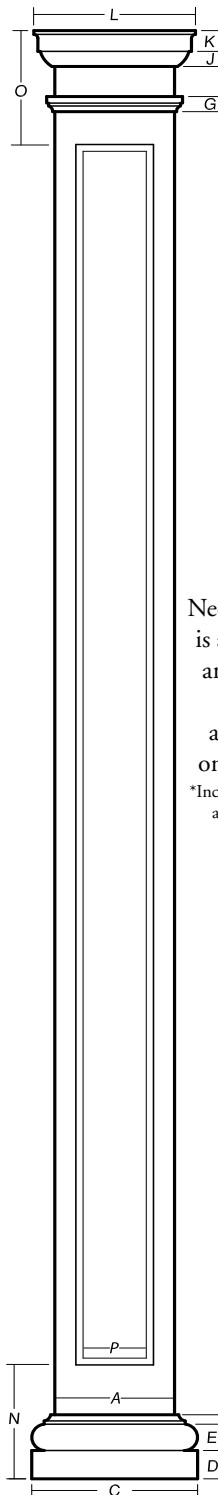

PermaLite® Square Column shown with Tuscan Cap and Base

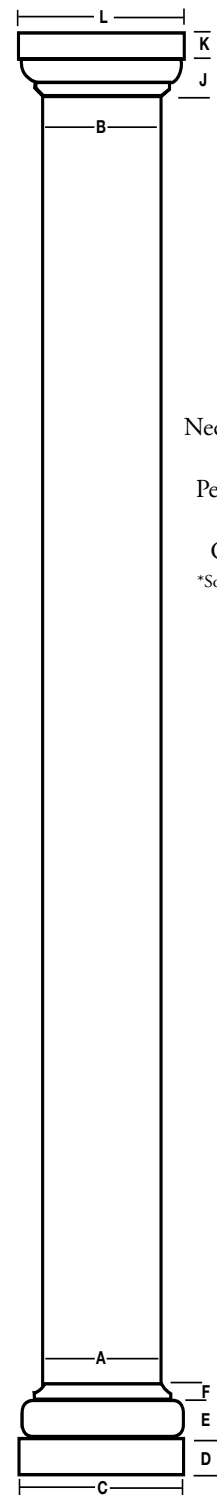

PermaLite® Round No-Taper Column shown with Tuscan Cap and Base

Neck Mould\* is adjustable and can be applied anywhere on column.

\*Included with cap and base set.

Neck Mould\* for PermaLite® Round Column  
\*Sold separately

See page 23 for dimension chart.

## PLAIN AND RECESSED PANEL SQUARE PERMALITE® COLUMN DIMENSIONS (IN INCHES)

Col. Size	A	C	D	E	F	G	J	K	L	N	O	P	Lengths Avail. (ft.)
6"	5-1/2"	8-1/2"	1-1/2"	1-1/4"	1/2"	1"	7/8"	1-1/16"	8"	N/A	N/A	N/A	6, 8, 9, 10
8"	7-1/2"	11"	1-15/16"	1-11/16"	3/4"	1"	1"	1-7/16"	10-1/16"	8"	8"	3-7/8"	6, 8, 9, 10, 12
8"*	7-1/2"	10-7/16"	1-7/8"	1-11/16"	5/8"	1"	1"	1-3/8"	10-1/4"	8"	8"	3-7/8"	6, 8, 9, 10, 12
10"	9-1/2"	12-15/16"	2-1/2"	2-1/8"	3/4"	1"	1-5/16"	1-3/4"	12-3/4"	9"	9"	4-3/8"	6, 8, 9, 10, 12
10"*	9-1/2"	13-1/8"	2-3/8"	2-1/8"	3/4"	1"	1-1/4"	1-3/4"	12-3/4"	9"	9"	4-3/8"	6, 8, 9, 10, 12
12"	11-1/2"	15-1/4"	2-3/4"	2-7/16"	13/16"	1"	1-3/8"	2"	15-7/8"	N/A	N/A	N/A	6, 8, 9, 10, 12


\* (SIM) caps and bases. The remainder are poly caps and bases.

• See drawing on page 22.

NOTES: Recessed Panel top inset – 8" = 8", 10" = 9"; Bottom inset – 8" = 8", 10" = 9". Neck mould is adjustable and is applied in the field. Recessed Panel available in 8" and 10" sizes only. Factory split PermaLite® columns are not available. HB&G® does not recommend splitting PermaLite® columns.

### SQUARE PERMALITE® INSIDE DIMENSION

Col. Width	Inside
6"	4-5/8"
8"	6-5/8"*
10"	8-5/8"*
12"	10-5/8"

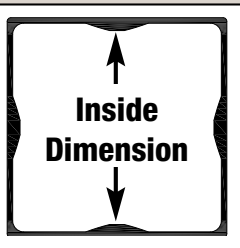

### COLONIAL SQUARE CAP AND BASE FOR PERMALITE®

Col. Size	C	D	E	F	J	K	L	R
6"	8 1/8"	1 1/4"	1 1/16"	7/16"	5/8"	1"	7 7/16"	2 3/4"
8"	10 1/8"	1 1/4"	1 1/16"	7/16"	15/16"	1"	9 7/16"	2 3/4"
10"	12 1/8"	1 1/4"	1 1/16"	7/16"	15/16"	1 1/4"	12 1/8"	2 3/4"
12"	14 1/8"	1 1/4"	1 1/16"	7/16"	1"	1 3/8"	14 1/4"	2 3/4"

• Neck moulding is 4 pieces included with the cap and base.

• See drawings on page 22.

\*Recessed Panel Inside Dimensions 8" - 5-5/8"; 10" - 7-5/8"

### ROUND PERMALITE® NO-TAPER COLUMN DIMENSIONS

Col. Size	A	B	C	D	E	F	J	K	L	Lengths
8"	7-5/8"	7-5/8"	10-1/2"	1-7/8"	1-3/4"	3/4"	1-1/4"	1-1/2"	10-5/8"	6', 8', 9', 10'
10"	9-5/8"	9-5/8"	13-1/8"	2-3/8"	2-1/8"	3/4"	1-1/4"	1-3/4"	12-3/4"	6', 8', 9', 10', 12'

### ROUND PERMALITE® DIMENSIONS

Inside diameter may vary up to 1/8".

COLUMN SIZE	ID
8"	7-3/8"
10"	9-3/8"



One Piece Neck Mould for 8" and 10" Round No-Taper Column Is Available. Neck Ring Sold Separately.

**NEW**

### BEVELED CAP & BASE SET

Size	A	B	C
6"	5-1/2"	7-1/4"	3-1/2"
8"	7-1/2"	9-1/4"	3-1/2"
10"	9-1/2"	11-1/4"	5-1/2"
12"	11-1/2"	13-1/4"	5-1/2"

\*For Square PermaLite® Columns

